

Torque Meter 1.5LTDK~100LTDK

Product Description

Feature:

- Once reach setting value of the torsion, scale wrench will automatically disconnect clutch and happen idling, so not happen too much tighten
- By the lock structure, will lock the setted torque, therefore, it can prevent deviation in the operation. (for 6~50 LTDK)
- 1.5~3 LTDK type with a tube clip of clamp screw head .
- After seting required torque value, whoever can use the same torque force to work.
- Each of type with a tool bit.
- With casing head and hex head of each type
- Can be used in left or right



Specification:

Type	Load range(kgf.cm)	Min scale	Screwdriver length(mm)
1.5LTDK	0.1-0.5	0.01	96
3LTDK	0.2-3	0.02	96
6LTDK	0.5-6	0.05	110
12LTDK	1-12	0.1	160
20LTDK	2-20	0.1	160
30LTDK	2-30	0.1	160
50LTDK	5-50	0.25	200
100LTDK	10-100	0.5	235